


Senseez VIBE Unit- User Guide

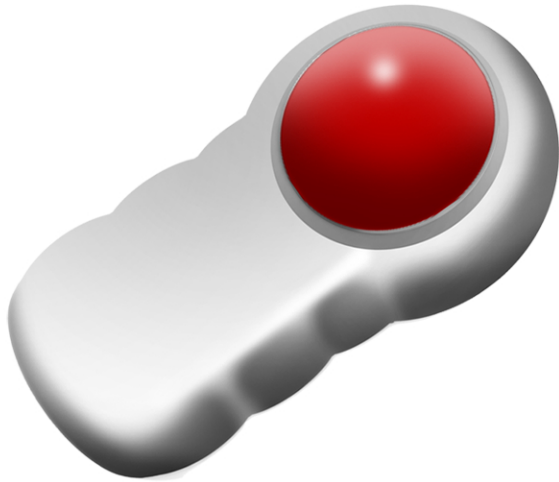

Regular VIBE Unit

- Requires two Double AA batteries not included.
- To insert batteries, go to the back of the vibe and remove the battery door with a phillips (star head) screwdriver.
- Place two new Double AA batteries into the vibe. Follow the directional signs inside the unit for proper placement.
- Replace the battery door cover.
- Batteries last up to 20 hours with constant use (for best performance, high quality batteries are recommended).
- This VIBE Unit is not waterproof and should not be in contact with water.

Rechargeable Multi-Speed VIBE

- This unit does not require batteries. It charges only by USB cable (included). The unit comes 20% charged upon receipt.
- To charge the unit, insert the charging jack into the bottom of the vibe unit, and the USB end into a computer or other USB charging source.
- A red light will illuminate when charging. Charge for 4 hours. The charge lasts approximately 10-20 hours depending on low, medium or high usage.
- To use the variable speeds, locate the switch at the bottom of the vibe (next to the charging jack) and slide left for low, middle for medium, and right for high. This will vary the intensity of the vibrations.
- This VIBE Unit is not water proof and should not be in contact with water.